

IMPORTANT START UP AND OPERATING PROCEDURES HONDA HOVER MOWER HM19H-4

- **FILL THE ENGINE WITH OIL TO THE PROPER LEVEL**
- **INSTALL THE AIR FILTER**
- **CHANGE THE OIL AFTER FIRST FIVE (5) HOURS OF OPERATION.**
- **DO NOT RUN THE ENGINE AT FULL LOAD DURING THE FIRST TWENTY (20) HOURS OF OPERATION.**
- **DO NOT OPERATE THE MOWER IN SLOPES EXCEEDING 45 DEGREES INCLINE.**
- **READ OWNER'S MANUAL**